




# Sony BDP-S3700 Wi-Fi Module Replacement

The Wi-Fi module connects the Sony BDP-S3700 to Wi-Fi signals and to the internet. This guide shows how to replace it.

Written By: Luiz Barreto

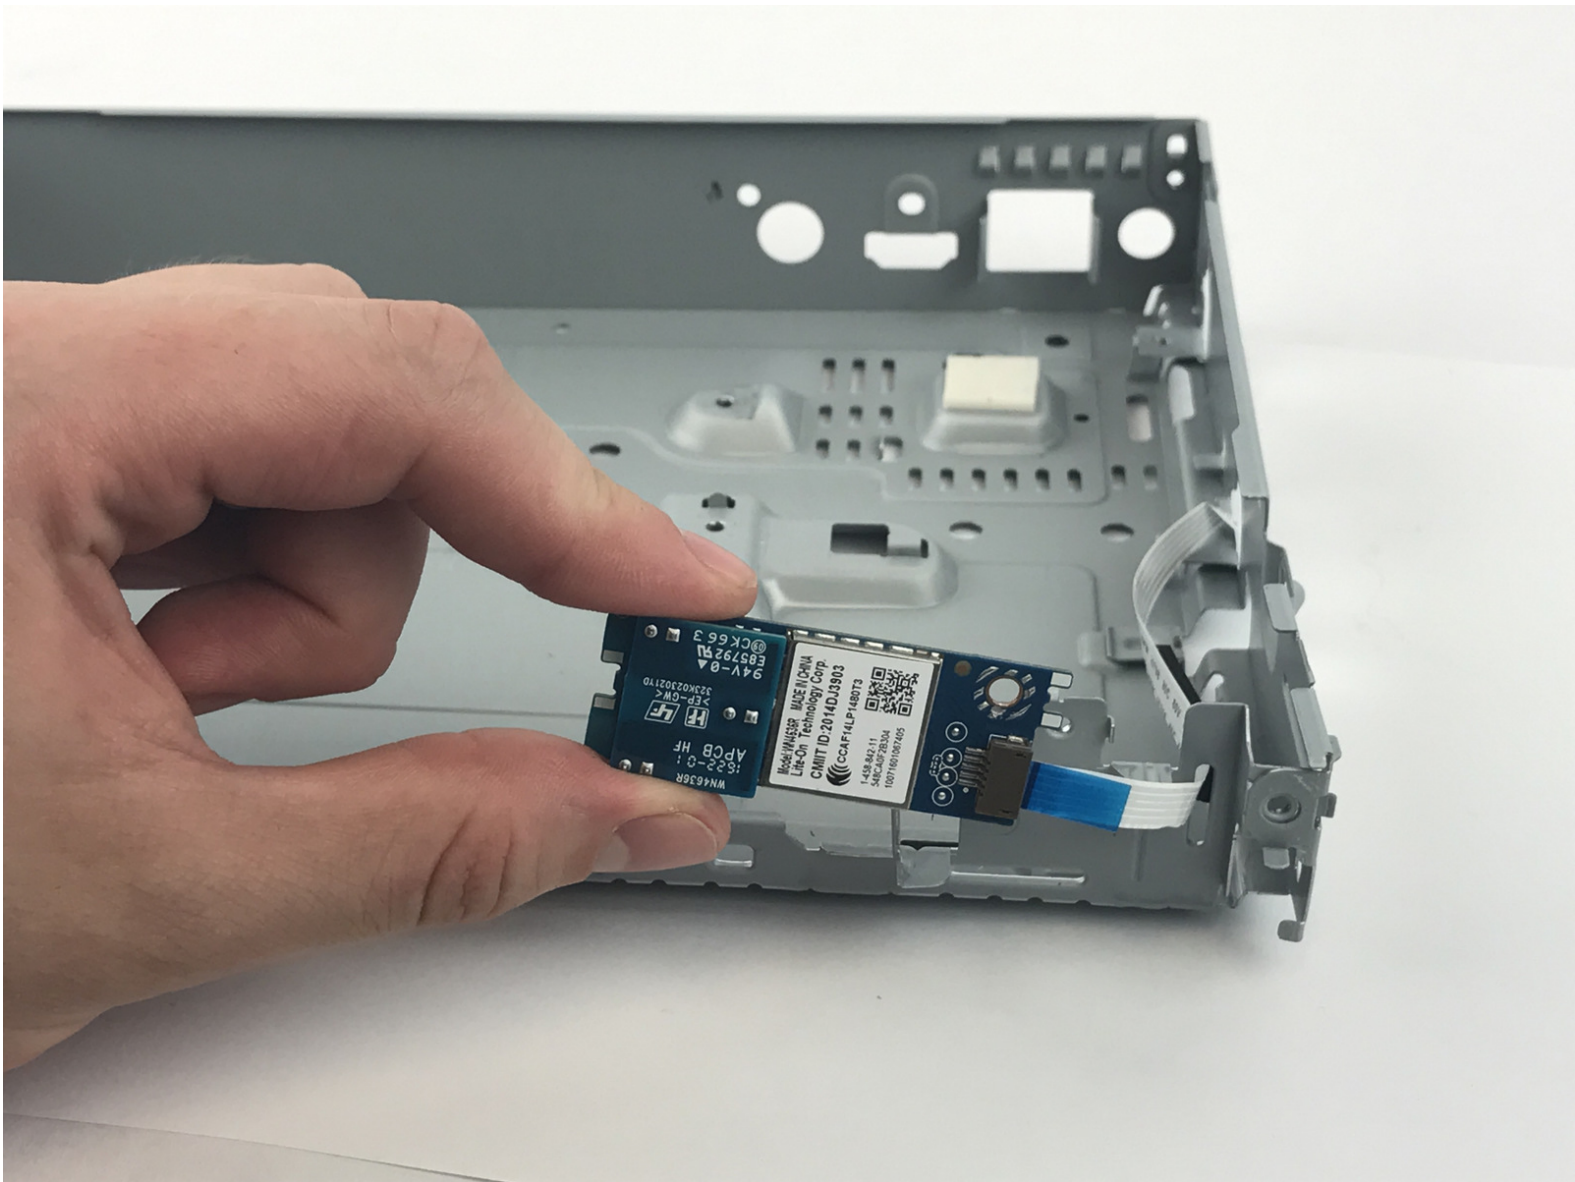

## INTRODUCTION

The Wi-Fi module connects the Sony BDP-S3700 to Wi-Fi signals and to the internet. This guide shows how to replace it.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Front Panel



- Use the PH1 screwdriver to remove the two 9mm screws on the back of the Blu-ray player.


## Step 2



- Remove the back of the device by slowly sliding the rear outer housing backwards.



## Step 3

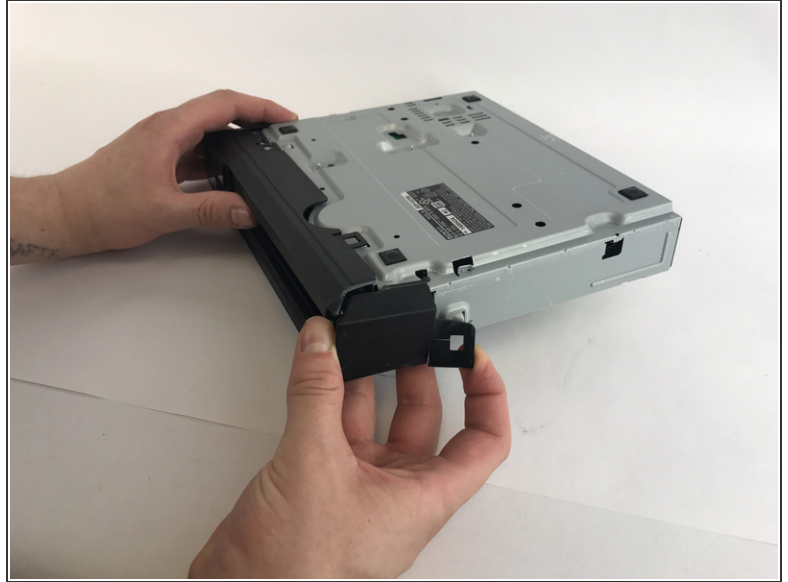


- Turn the Blu-ray over
- Pry open the clips under and on the sides

## Step 4



- Once all the clips are open, slide the front outer housing out.


## Step 5 — Port Board

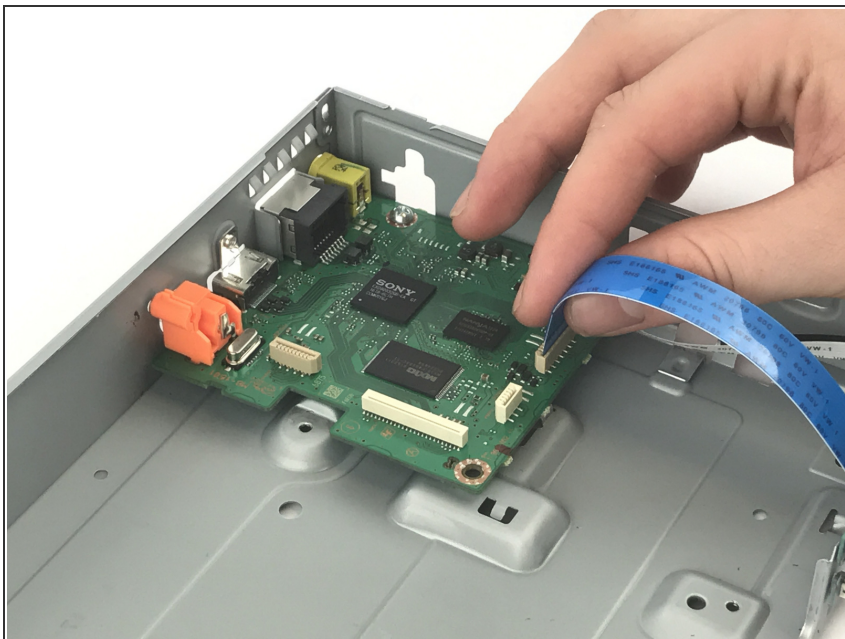

- Flip the Blu-ray back up
- Remove the ribbon connecting the port board to the motherboard.


⚠ Handle the circuits only on its side.

## Step 6

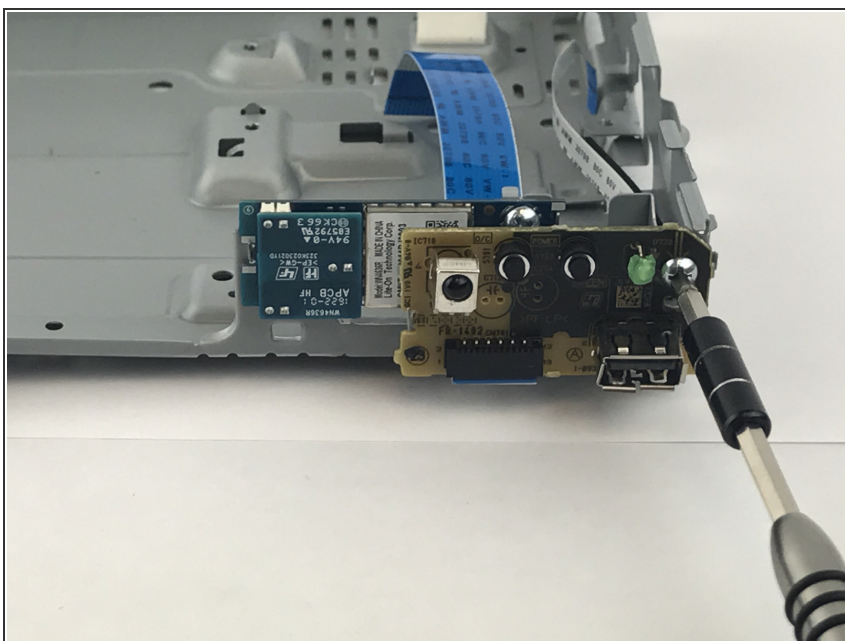


- Use the PH1 to remove the 7mm screw on the port board.

## Step 7

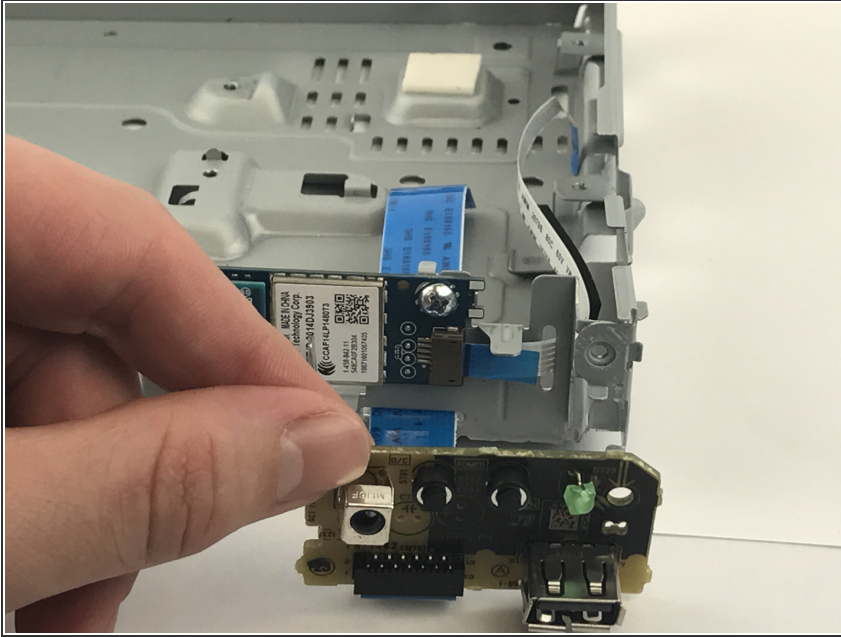

- Remove the port board.


## Step 8 — Wi-Fi Module

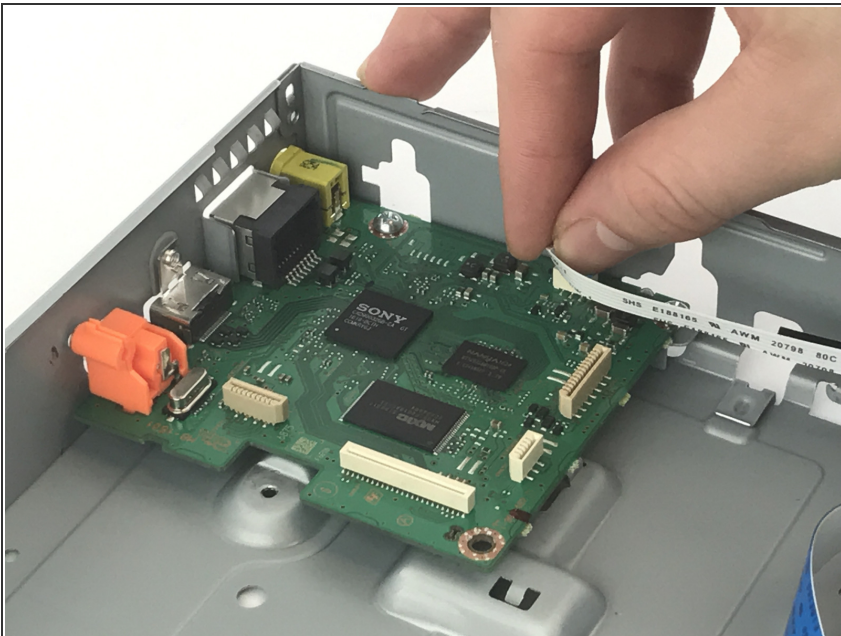

- Remove the ribbon connecting the Wi-Fi module to the motherboard.




## Step 9

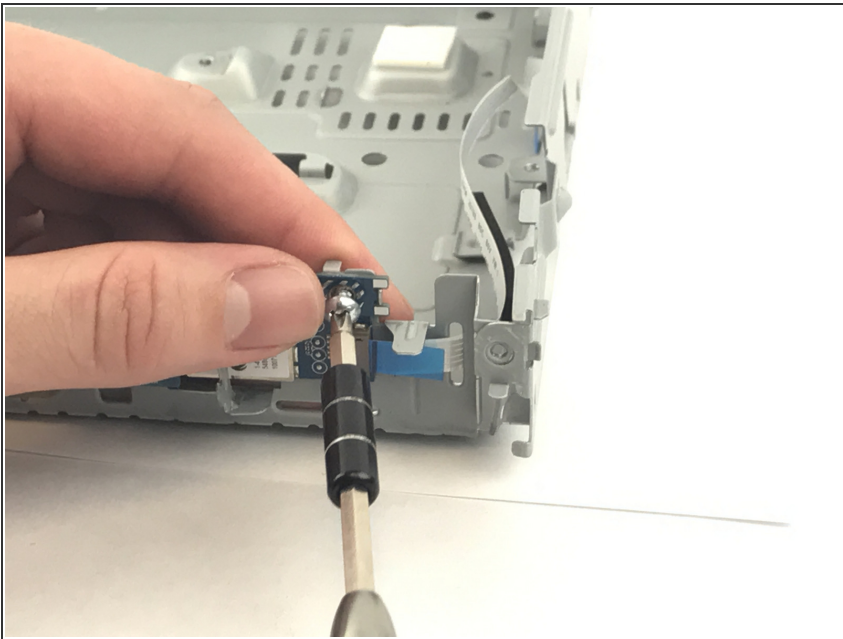

- Use the PH1 screwdriver to remove the 7mm screw on the module.

## Step 10

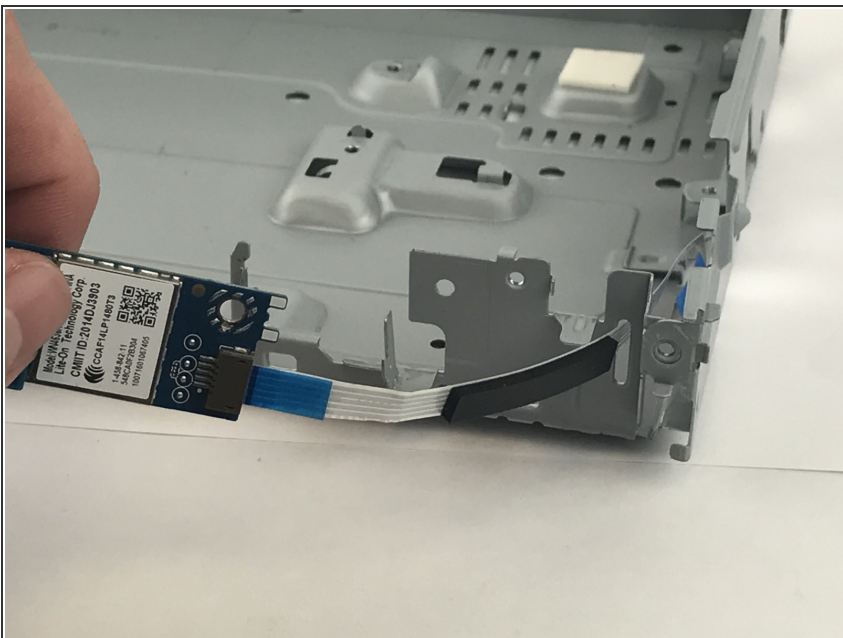

- Remove the Wi-Fi module

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 03:02:14 PM.